

DS-KAD704Y

Video Intercom Two-Wire Video/Audio Distributor

HIKVISION

UD299908-A

Diagram References

1 Appearance

- ① Power Indicator
- ② Cascade Interface
- ③ Terminals
- ④ LAN
- ⑤ Cascade Network Indicator
- ⑥ Network Indicator
- ⑦ Power Input
- ⑧ Reset

2 Wiring

Wire the devices with power supply cables.

Door station should be connected to CH4 of the video/audio distributor with two-wire cables.

Indoor Station should be connected to any terminal of CH1 to CH3 of the video/audio distributor with two-wire cables.

Indoor Station should be connected to any terminal of CH1 to CH3 of the video/audio distributor with two-wire cables.

Caution: Make sure all the related equipment is power-off during the installation.

Note: The power output of CH1 to CH3: 24 VDC, Max. 4W. The power output of CH4: 24 VDC, Max. 8W.

3 Installation

Before you begin:

Make sure the device in the package is in good condition.

Make sure all the related equipment is power-off during the installation.

Check the product specification for the installation environment.


- ★ 1. Fix the DIN rail onto the wall.

Note: You are required to utilize a matched DIN rail.


- 2. Press the red clip upward, and lock it to the DIN rail.

Note: The power source should be qualified and meet limited power source or PS2 requirements according to IEC 60950-1 or IEC 62368-1 standard.

1

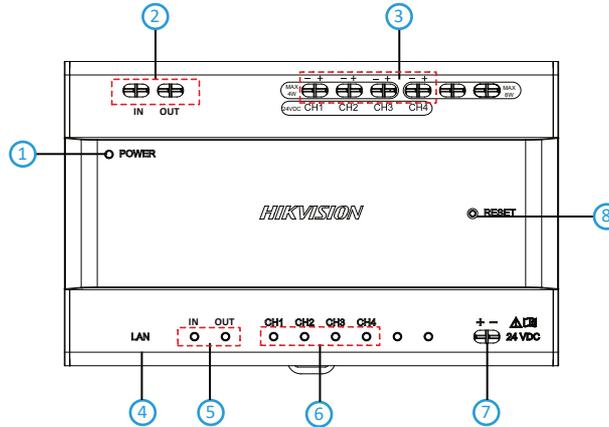

2

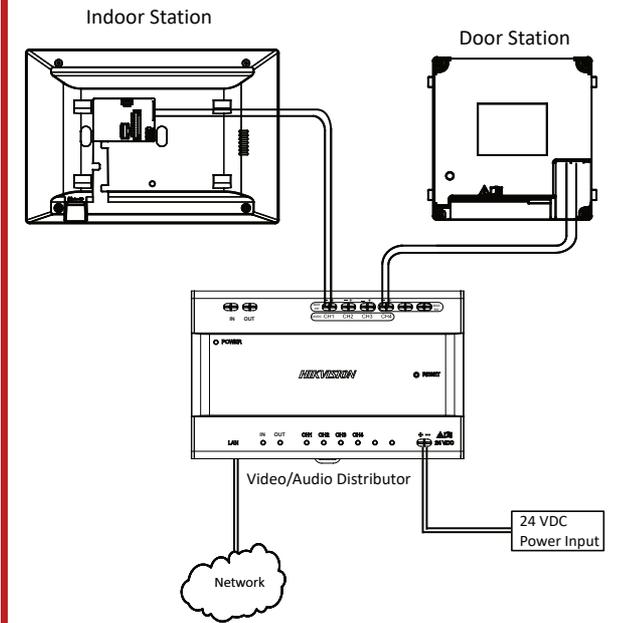

Note:

The door station, indoor station and power adapter are **NOT** contained in the package.

3

