


1. Package Contents

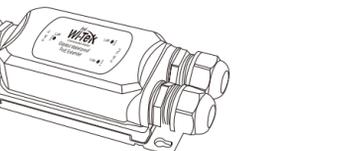

1 x Device



3 x M22 Waterproof Gland



1 x Wrench



 

1 x Ground Wire



1 x Quick Installation Guide

2. Hardware Introduction


2.1 Product Outlook

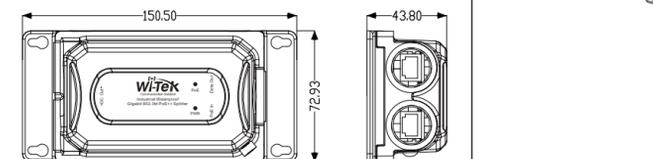

Unit: mm


3. Application Diagram

3.1 Industrial IP68 PoE Extender (Take WI-POE22E-O as an example)

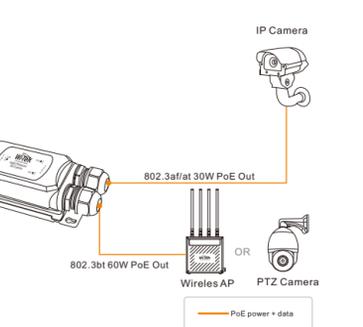


LED	Color	Status	Description
LAN	Green	On	Link established
		Off	No device connection
		Blink	Data and power are transmitting

3.2 Industrial IP68 PoE Injector

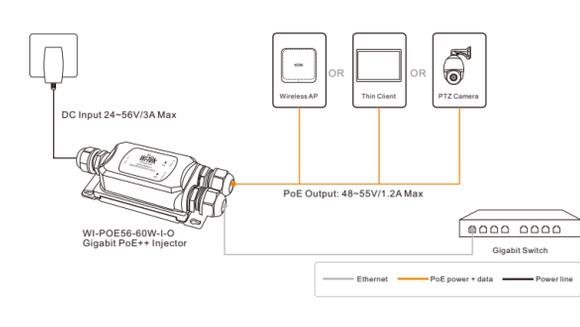

LED	Color	Status	Description
PWR: Power	Green	On	Power on
		Off	Power off
PoE	Green:	On	PD connection is successful
		Off	No PD connection
		On	PD connection is successful
		Off	No PD connection

3.3 Industrial IP68 PoE Splitter

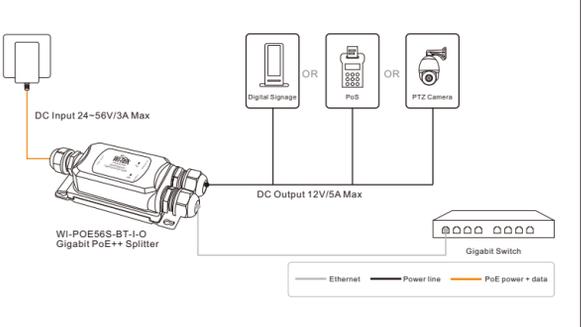

LED	Color	Status	Description
PWR: Power	Green	On	The voltage of PoE output is normal
		Off	The voltage of PoE output is abnormal
PWR: Power	Green	On	12V DC output is normal
		Off	No PoE output or the splitter is abnormal

4. Accessories Installation

Take WI-POE22E-O as an example

Step 1: Disassemble the waterproof gland



Step 2: Turn the body of waterproof gland to the RJ45 ports and tighten it by the wrench. Pick a cable and run through the sealing insert and clamping nut.



Step 3: Plug the cable into the port.



Step 4: Insert the sealing insert to the waterproof gland body.



Step 5: Attach the clamping nut to the waterproof gland to complete assembly.




Step 6: Check it and make sure it is tightly install.



Step 7: Repeat Step 1 to Step 6 for other ports.



5. Hardware Installation

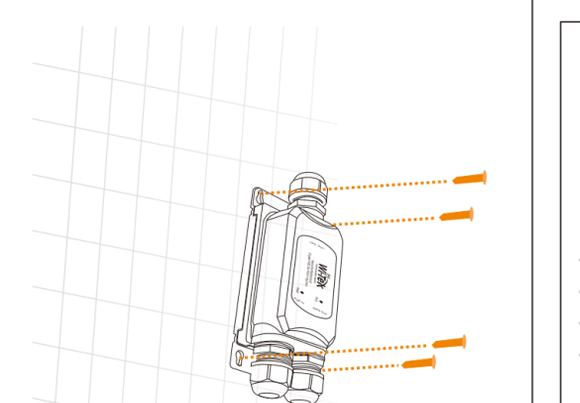

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.

Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.

Technical Support

Cloud Management

Company Website

Wireless-Tek Technology Limited
 Address: Biaofang Technology Building 402, Bao'an street, Baoan District, Shenzhen City, Guangdong, China
 Website: www.wireless-tek.com
 Tel: 86-0755-32811290
 Email: sales@wireless-tek.com
 Technical Support: tech@wireless-tek.com