

WITEK TWT 4 4 4 4 4 Land Control of the C























www.wireless-tek.com











L_{L_r}, L_{L_r}, L_{L_r}, L_{L_r}, L_{L_r}, L Switch x 1

Power Adapter x 1

Quick Installation Guide x 1

mam 1 1 2 1 2 2 Cammil ammil ammil

1. Packing Content

2.Hardware Overview

WITEK

On: The device is powered on normally

Off: The device is not powered on or has failed

5*10/100/1000Mbps RJ45 Ports

LED Indicators

DC 5V/1A IN

1911 1 2 2 2 2 2

On: Port connected

Off: Port disconnected

Blinking: Data transmission

WI-SG105

Front panel

LED indicator

WI-SG108

Front panel

DC 5V/1A IN

LED Indicators

LED indicator

Link Indicator

WITEK

Land Control C

On: The device is powered on normally

On: Port connected

Off: Port disconnected

Blinking: Data transmission

Off: The device is not powered on or has failed

8*10/100/1000Mbps RJ45 Ports

3.1 Desktop Installation

3.2 Wall-Mounting Installation

WITOK

La rate rate rate rate

Step1. Use a marker to mark the location of mounting holes on the wall. The two

mounting holes should be in the same horizontal line. The spacing between the

screws matching the spacing between the two fixing holes of the switch.

Warranty Card

If the product defects within the warranty period, we will provide professional

services guaranteed as part of the limited warranty.

Proof of purchase and a complete product serial number are required to receive any

Any other defects that are not caused by workmanship or product quality, such as

damaged, warranty card loss will disqualify the product from limited warranty.

natural disasters, water damage, extreme thermal or environmental conditions, sticker

Wireless-Tek Technology Limited Address: Building 3, Units 1801-1807, 1812,

Guangdong Province, China.

Tel: 86-0755-32811290

Website: www.wireless-tek.com

Email: sales@wireless-tek.com Technical Support: tech@wireless-tek.com

Huagiang Era Plaza, Tangwei Community,

Fuhai Street, Bao'an District, Shenzhen City,

CE FC ROHS I UK 💩

Address

Telephone No.

Purchase Shop

Purchase Address

Product Model No.

Purchase Time

Dealer Signature

maintenance service.

Serial No.

 Step2. Fix 2 screws on the wall. Leave the screws at least 1.5mm outside the wall to ensure that the switch can be firmly hung on the screws. (Recommended

• Step3. Fasten the switch to the screws through the two installation holes at

the bottom of the switch. Place the switch ports side down, and the two sides

of the switch are perpendicular to the ground.

specifications for wall mounting screws: M3*12MM, screw head ≤ 6mm)



(mmm | mmm | mmm | mmm | mmm |