

WI-PCMS310GF(V2) | WI-PCMS328GF(V2)


1. Packing Content



Switch x 1



Quick Installation Guide x 1

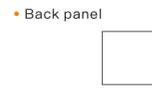

Serial Line x 1



Power Cord x 1




Mounting Accessories (hook x 2, mats x 4, screw x 8)


2. Appearance Overview

WI-PCMS310GF

• Front panel

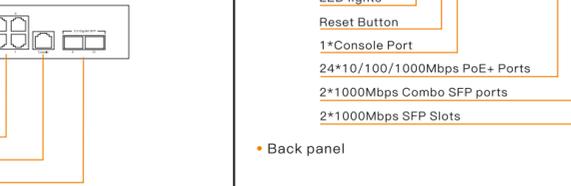

• Back panel

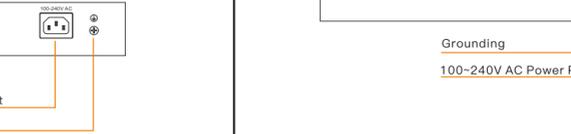


• LED indicator and button

LED indicators & button	Description
SYS	Blinking: The Device system is operating normally Off: Device system or power connection abnormality
PWR	On: The device power on is normal Off: The device is power off or failed
PoE	On: Equipment connected, normal power supply Off: Port not for terminal equipment power supply
Link	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset	Hold for >5 sec. to restore factory default

WI-PCMS328GF

• Front panel

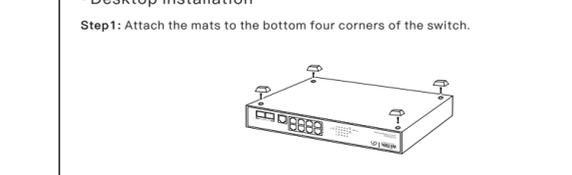

• Back panel



• LED indicator and button

LED indicators & button	Description
SYS	Blinking: The Device system is operating normally Off: Device system or power connection abnormality
PWR	On: The device power on is normal Off: The device is power off or failed
PoE	On: Equipment connected, normal power supply Off: Port not for terminal equipment power supply
Link	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset	Hold for >5 sec. to restore factory default


3. Installation

• Desktop Installation



Step1: Attach the mats to the bottom four corners of the switch.



Step2: Place the switch horizontally on the desktop.

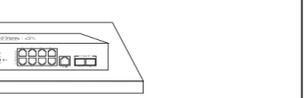


• Rack-mount Installation

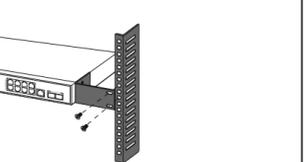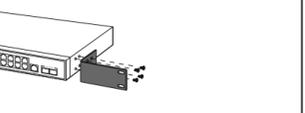

4. Configuration

First, the device is powered on, the Internet is connected to the WAN port of the Gateway, the other one LAN port of the Gateway is connected to the PoE Switch, then the PC is connected to the Switch. Ensure that the PC and the Gateway are in the same subnet.

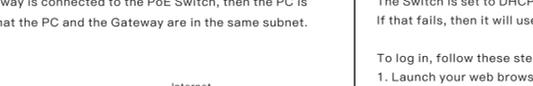

• Use the console cable to access the switch

Connection Diagram:



Cloud L2+ Managed PoE Switch
PC
Serial Line

• Use Telnet to log in to the CLI mode of the switch

Connection Diagram:



Cloud L2+ Managed PoE Switch
PC
Ethernet Cable

4. Configuration


• Log in to the switch locally

Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned.

The Switch is set to DHCP by default, so it will try to obtain an IP address automatically. If that fails, then it will use the default fallback IP address, 192.168.0.1

Notice:

Step 2 is your computer recognizes the COM number of the console line
Step 3 is the baud rate of the switch (the baud rate of the switch is 9600)

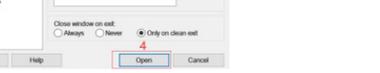




4. Configuration

• Use Ternet to log in to the CLI mode of the switch

Connection Diagram:






Cloud L2+ Managed PoE Switch
PC
Ethernet Cable

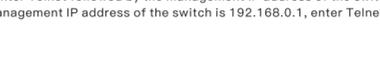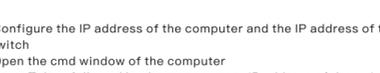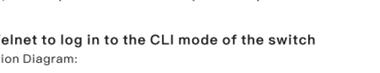

4. Configuration

• Cloud login switch configuration



1. Log in to the cloud management page
(No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)

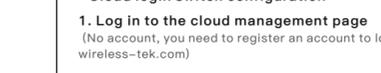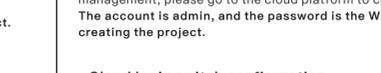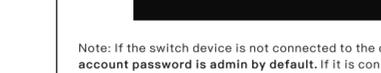

4. Configuration

• Cloud login switch configuration


1. Log in to the cloud management page
(No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)

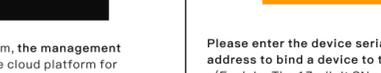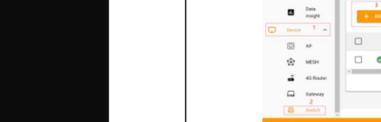

4. Configuration

• Cloud login switch configuration

1. Log in to the cloud management page
(No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)

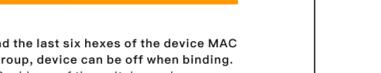

4. Configuration

• Cloud login switch configuration

1. Log in to the cloud management page
(No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)



Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Technical Support Company Website Cloud Management

Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812, Huangliang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

